

Operating instructions

MWN130-NC



Flow sensors with connecting flanges DN 50÷300 - CE

Please read carefully the instructions before starting the installation of the flow sensor in order to ensure the intended use.

Contents

1. The subject of the instructions	3
2. Technical data- standards and regulations.....	3
3. Description of the correct flow sensor operation	4
4. Selection of the proper size of the flow sensor	4
5. Testing on receipt.....	4
6. Conditions for the proper installation of water meters	5
7. Filling the water and start the flow sensors	7
8. Maintenance and inspections.....	8
9. Storage and transport	8
10. Malfunctions and its removal	8
11. Safety conditions and environmental aspects.....	9
12. Pulse value of flow transducer and connection diagram.....	10
12.1. Pulse value of flow transducers in basic version (factory) for the NC transmitter	10
12.2. Pulse value of flow transducers.....	10
13. Handling of used products packaging.....	11
14. User's evaluation	11

1. The subject of the instructions

This operation manual describes the right criteria for suitable conditions, correct incorporation, operation and maintenance, as well as rules relating to safety, environmental protection and utilization of flanged flow meters designed to measure the volume of heating water. Instruction covers the following type of flow sensors.

Tabela 1. Type and application of flow sensors.

Type	Application
MWN130-NC (WPH-N-01-130-NC) – screwed with horizontal rotor axis	- Water heat max 130°C - Operating pressure max.1,6Mpa (16bar) - NC-pulse transmitter to a heat meter - IP65

Tabela 2. Types of installation positions.

Water meter type	Installation position:		Counter location
	Horizontal	Vertical	
MWN130-NC (WPH-N-01-130-NC)	✓	✓	

* admissible offset from the vertical $\pm 5^\circ$

2. Technical data- standards and regulations

Technical data are included in the catalogue data sheets for particular types of flow sensors. Flow sensors comply with following standards and regulations:

- Directive 2014/32/EU z 26.02.2014 focusing on harmonising many aspects of legal metrology across all member states of the EU,
- EN-1434 – Heat meters,
- OIML R75 – Heat meters.

Basic requirements related to water meters installation are included in the standards. ISO 4064-2 + Measurement of the volume of water in the pipes. Water meters for potable, cold water, Installation requirements.

3. Description of the correct flow sensor operation

Flow sensors MWN130-NC (WPH-N-01-130-NC) consists of a measuring mechanism body, a counting unit and a set of a transmitter. The water jet drives a rotor placed in a measurement device. The rotor is located coaxially to the body channel and it drives the magnet placed on the axis by a worm-wheel system. The magnet in the wet part is coupled with the counting mechanism magnet in the dry part of the water meter. Sensor guidance and drums are driven through the arrangement of gear wheels and sum the volume of water measured. The impulse transmitter records the indications of the counting mechanism in order to continue reading data by the electronic external interface.

4. Selection of the proper size of the flow sensor

The working conditions of the flow sensor are always a criterion to select an appropriate size (nominal diameter) of the flow sensor, such as average and maximum value of the actual flow rate of flowing water. The nominal flow rate is the main reference value when choosing the flow transducers.

5. Testing on receipt

The delivered flow sensor should be checked for any eventual defects suffered during transport, external damage, especially with regard to housing and its flanges, counter cover as well as the electric wire. The condition of the seals with its legal function or safety should be inspected including seals fasteners as well as a flow sensor labelling.

The following markings are placed on the counter disc, a plate or the body of the flow meter:

- Name or marking of the manufacturer or a complete address of the manufacturer
- Mark of test type as per MID
- Manufacturer's mark type
- Flow sensor manufacturing number
- Production year
- Flow direction as an arrow
- Mark V for vertical pipes flow sensors
- Mark H for horizontal pipes flow sensors
- Flow rate q_p in m^3/h
- Indication of measurement unit in m^3 (on the counter dial)
- Maximum pressure loss value Δp (pressure loss at q_p)
- Temperature range $\Theta=0,1-130^\circ C$
- Upper limit of pressure value PN 16
- Impulse value for flow sensor
- Minimum value q_i and maximal value q_s of jet flow
- Accuracy class 3
- Environmental class C

6. Conditions for the proper installation of water meters

6.1.

The installation location of the flow sensor should be easily available for assembly, disassembly and maintenance, convenient for reading, separated from the utility or industrial spaces. It must be protected against weather conditions and secured against the interference with electric and gas installations.

6.2.

The flow sensor installed in place should not be exposed to a shock or vibrations induced by the working devices in the vicinity, and high temperature of the ambient air and pollution, flooding and corrosion of the external environment. The temperature of the installation place should not be lower than 4 ° C.

6.3.

In front and behind of the flow sensor the place should be provided for installation of the valves to shut off the water supply if the removal is necessary to revise or repair, the valves to be used must fully expose the cable cross-section.

6.4.

In the case of anticipated water pollution during operation a filter or strainer must be installed between the valve and the straight section in front and behind the water meter flow sensor.

6.5.

For the installation of the flow sensor which does not cause stress in the body it is recommended compensating the use of fasteners mounted at the outlet, which allow to reduce the length of the telescopic extension within the sleeve of the embedded connector.

6.6.

The cable in place of installation should be designed so that there is no possibility of the formation of the air pocket within the flow sensor. The transmitter must be completely filled with water. Thus, pipe water supply behind the transmitter cannot lower (Fig. 1) .

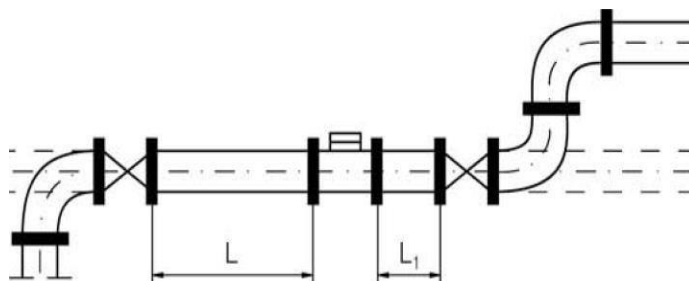


Fig.1 Installation of the flow sensor to the heat meter

6.7.

The flow sensor should not be exposed to excessive stresses caused by pipes or fittings. If this is necessary, it should be mounted on a base or holder. Moreover, the pipes connecting upstream and downstream must be secured so that no part of the installation moves under water pressure, when the transmitter is dismantled or disconnected from one side.

6.8.

When installing in a district heating network, it is required to observe the proper positioning of the flow sensor as intended for use in mounting position: horizontal, vertical and oblique (Table 3).

6.9.

Transmitter MWN130-NC (*WPH-N-01-130-NC*) can work without considering the straight sections in front of (U0) and behind a water meter (D0).

Special requirements of transmitter mounting.

In the route allowing the use of straight sections for the protection against negative impact of water stream deformations (flow disturbances) caused by bent pipes, valves and other system components the straight section of pipe with a length $L=3DN$ (nominal diameter meter) may be included. In the case of the installation of the transmitter with a double bend pipe, reverse valve or pump the given length of the straight pipe should increase twice. $2L$, in case of the piston pumps it may be even tripled. $3L$, in order to avoid such a long straight section, the water deflector may be mounted in front of the transmitter. The disturbances appearing behind the transmitter do not have generally any impact on the accuracy of the indications. The short straight section is recommended to be used also behind the transmitter if installation conditions allow in order to avoid possible damage of rotor bearing caused by water backflow. $L1 = 2DN$.

6.10.

Sections of the heat pipe in front of and behind the transmitter should be made coaxially. Seals should be mounted concentrically to the pipe. It is not allowed to embed the transducer in the eccentric position in the pipe, and in particular the shift of seals between the flow sensor and pipe which in consequences occupies a part of the free cross section of the cable at the transmitter and thus distort the flow.

6.11.

The flow of water through the flow sensor should be consistent with the direction of the arrows located on both sides of the body.

6.12.

Transmitters are designed for a flanged installation. Flanges are produced as per ISO-7005-2 PN10 or other standards on the user's request. Heating pipe in place of the installation with the identical drilled flanges. should have prepared before installing the transmitter.

ATTENTION!!! It is unacceptable to perform welding work when the transmitter is connected due to its possible damage.

6.13.

The embedding of flow sensors requires screws of size adapted to the holes in the flanges and sealing washers.

7. Filling the water and start the flow sensors

7.1.

Before installing the transmitter, the pipeline should be flushed to remove impurities, and if the filter is used it should be cleaned. During the rinsing the spigot must be used in place of the transmitter.

7.2.

Before the installation, the operation of the transmitter flow should be checked by setting into motion the rotor and watching of his turnover or of rotation direction counter. The condition of the seals should be checked.

7.3.

After the installation of the flow sensor, the water should be brought to the pipeline slowly and with open vents in the way the air leaving the system does not cause an excessive rotation of the transducer resulting in its damage.

7.4.

When operating the valves in front and behind the flow sensor must be fully open.

7.5.

After completing all the activities related to the launch, the flow sensor work should be tested by observing the growth of indications on a counter.

7.6.

During operation, the actual operating conditions should be checked for meeting the purpose of the flow sensor in particular in relation to allowable pressure, temperature and flow.

8. Maintenance and inspections

The flow sensor is a device changing over time its properties and measurement. The deterioration of these properties is mainly the result of the aggressive action of water, therefore each transducer should be after some time, and especially after the heating period, remove from the network and give it a scheduled review or reconstruction.

Validity periods of compliance assessments are specified in the metrological regulations. After removing the flow sensor from the network it is indicated for comparison purposes prior to verify the accuracy of its indications, and only after this control to start the dismantling and cleaning. It is forbidden to use chemical toxic substances for cleaning which may damages individual parts of a water meter. It is forbidden to use for cleaning of parts any kind of chemicals causing a material corrosion, especially such as solvents for plastic materials, or causing accelerated degradation of the seals.

9. Storage and transport

Flow sensors supplied or removed from the network should be stored in the position of counter set at the top or on the side indoors in the closed room, free from all kinds of corrosive or smelly fumes etc. affecting in the destructive way the stored transducers. Room temperature may vary from 5 ° C to 50 ° CM and the relative humidity of the ambient air up to 90%. During the transport as well as the storage flow sensors should be protected from vibrations, especially shocks that may damage the internal components or the housing. The transport should be carried by the use of covered means of transport in the factory packaging or replacement, packaging fully protecting the product from the damage.

10. Malfunctions and its removal

When water flows through transmitter and there is no indications of counter, please check if the rotor is not blocked by dirt. If the eventual cleaning of the transmitter does not bring any effect, and in any other case of inaction, the transmitter must be submitted for repair giving the made observations. If the impulse transmitter does not work, please notify the supplier. If the defect cannot be eliminated after consultation with the supplier, the transmitter must be submitted for repair.

11. Safety conditions and environmental aspects

11.1.

The flow sensor is a measuring instrument safe to use while maintaining the installation conditions and an intended use.

11.2.

Risk may occur associated directly with the transmitter during the installation and maintenance as well as the standard work.

- Mechanical risks
 - Fall if improperly carried
 - Water leakage and flooding in consequence of the incorrect mounting condition or excessive water pressure
- Thermal threats
 - burns resulting from the contact with the operating flow transmitter or leakage of hot water.

11.3.

The transducers have been shaped in the way which enable a proper holding in order to limit any mechanical threats. Greater weight transmitters are provided with handles to use with a lifting equipment. Special covers may be used to limit thermal threats.

11.4.

The location for the installation of the transmitter and its use should be well lit and easily accessible on paved ground without danger of fall.

11.5.

Components of the transducers do not contain substances harmful to health and environment.

11.6.

Used counter seals as well as other design solutions protect the flow sensor against the negative impact of water condensation on correct readings or transmitters work.

11.7.


Classification of environmental requirements

- EN-1434-1:2015 Classification of environmental requirements – Class C
- Classification of environmental and mechanical requirements – Class M1
- Classification of environmental and electromagnetic requirements – Class E2

12. Pulse value of flow transducer and connection diagram

12.1. Pulse value of flow transducers in basic version (factory) for the NC transmitter

Nominal diameter (mm)	Pulse value (m ³)
40; 50; 65; 80; 100; 125	0,1
150; 200; 250; 300	1

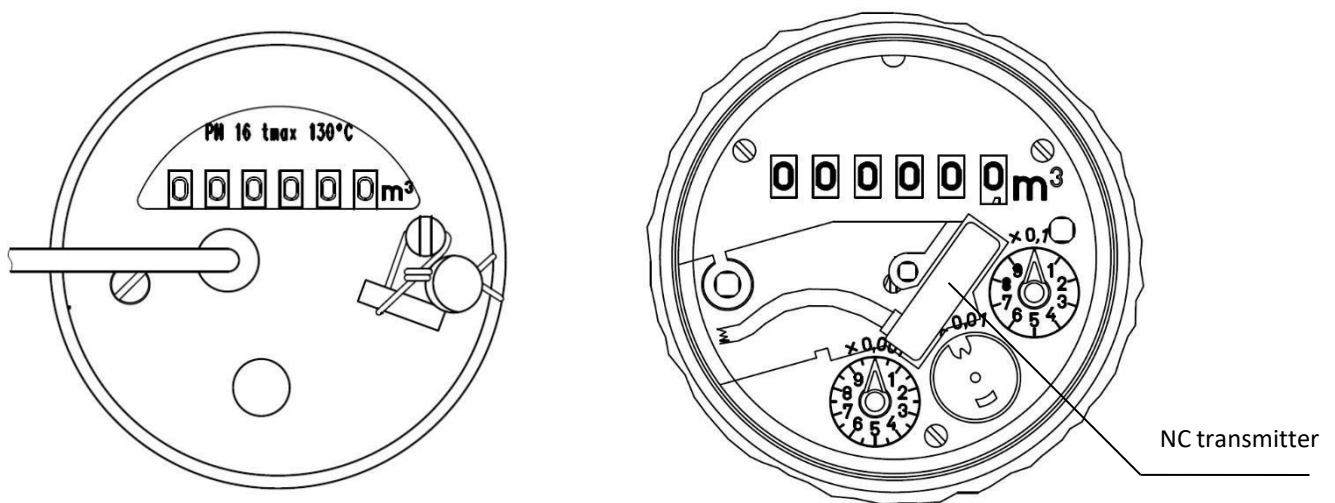

View after removal of the antimagnetic cover

12.2. Pulse value of flow transducers

In order to extend the standard cable transmitter is recommended to use a cable in the screen section of a single conductor min.0,75 mm² with regard to the guidance that the total impedance of the extended portion does not exceed 500 Ohm. The attention should be paid not to cross the route extension to the existing distribution of power cables, control, etc. Attention: Use shortest possible extensions lengths.

13. Handling of used products packaging

The packaging is made of corrugated cardboard suitable for reuse. They may be sent for recycling at any waste paper collection point. Detailed information on the recycling of various materials of which the flow sensor is made of as well as the ways of proper waste disposal can be obtained from the relevant departments of the company.

14. User's evaluation

Operating instructions are continuously updated. By providing us with your own suggestions for improvement you help us optimize instruction to meet the needs of users. We kindly ask you to send any comments on the instructions and on operating flow sensors on the address of the producer.

ATTENTION!!!

As part of the technical progress, the manufacturer reserves the right to introduce changes in its manufactured products, which may not be indicated in the instruction as long as the essential features of the type are preserved. We send a catalogue of spare parts on request.

DEKLARACJA ZGODNOŚCI UE
EU DECLARATION OF CONFORMITY

1. Model przyrządu: Przetwornik przepływu MWN 130-NC (WPH-N-01-130-NC)
Instrument model: Flow sensor MWN 130-NC (WPH-N-01-130-NC)

2. Producent wyrobu/ Manufacturer: **Apator Powogaz S.A.**
Adres/Address: Jaryszki 1c, 62-023 Żerniki
Kraj/ Country: Polska
Telefon/ Phone: 48 (61) 8 418 101
Adres e-mail/ e-mail: sekretariat.powogaz@apator.com

3. Niniejsza deklaracja zgodności wydana zostaje na wyłączną odpowiedzialność producenta.
This declaration of conformity is issued under the sole responsibility of the manufacturer.

4. Przetwornik przepływu Woltmana MWN 130-NC (WPH-N-01-130-NC)
Woltman flow sensor MWN 130-NC (WPH-N-01-130-NC)
średnica nominalna : DN 40, DN 50, DN 65, DN80, DN100, DN125, DN 150, DN 200, DN 250, DN 300
nominal diameter: DN 40, DN 50, DN 65, DN80, DN 100, DN 125, DN 150, DN 200, DN250, DN300
Zgodny z certyfikatem nr SK 11-MI004-SMU001 Wersja 3
wydany 29-04-2022 ważny do 16-02-2031
*According to certificate number SK 11-MI004-SMU001 Version 3
issued 29-04-2022 valid until 16-02-2031*

5. Opisany powyżej przedmiot niniejszej deklaracji jest zgodny z odpowiednimi wymaganiami unijnego prawodawstwa harmonizacyjnego.
The object of the declaration described above is in conformity with the relevant Union harmonisation legislation.
Wymagania zasadnicze: Rozporządzenie Ministra Rozwoju z dnia 2 czerwca 2016 r. w sprawie wymagań dla przyrządów pomiarowych wprowadzające do prawodawstwa polskiego Dyrektywę 2014/32/UE.
Essential requirements: The regulation of the Development Minister of 2 June 2016 on requirements for measuring instruments introducing to Polish legislation Directive 2014/32 / EU.

6. Odniesienia do odpowiednich norm zharmonizowanych lub odpowiednich dokumentów normatywnych, które zastosowano, lub do innych specyfikacji technicznych, w stosunku, do których deklarowana jest zgodność:
References to the relevant harmonised standards or normative documents used or references to the other technical specifications in relation to which conformity is declared:
Normy: OIML R 75-1:2002, OIML R 75-2:2002, EN 1434-1:2007, EN 1434-2:2007, EN 1434-4:2007, EN 1434-5:2007, EN 1434-6:2007, OIML R 75-3:2006, EN 1434-3:2007, EN 1434-6:2007.
Standards: OIML R 75-1:2002, OIML R 75-2:2002, EN 1434-1:2007, EN 1434-2:2007, EN 1434-4:2007, EN 1434-5:2007, EN 1434-6:2007, OIML R 75-3:2006, EN 1434-3:2007, EN 1434-6:2007.

7. System jakości produkcji, kontrola wyrobów finalnych i badania wodomierzy (zał. II moduł D) zostały zatwierdzone przez Jednostkę Notyfikowaną 1781 SMU w zgodności z Dyrektywą 2014/32/UE (Nr certyfikatu. SK 20-QD-SMU003 * ważny do 27-10-2023).
*The quality system for production, final product inspection and testing of the water meters (annex II module D) was approved by the Notified Body 1781 SMU in accordance with Directive 2014/32/EU (Document number SK 20-QD-SMU003 * valid until 27-10-2023).*
gdzie *) rewizja ważna w dniu wystawienia niniejszej deklaracji zgodności
where *) revision valid on the date of issue of this EU declaration of conformity

8. Informacje dodatkowe:
Additional information:


Apator Powogaz S.A.

Prezes Zarządu - Dyrektor Generalny
CEO, President & Managing Director


Z UP. PREZESA ZARZĄDU
KIEROWNIK LABORATORIUM

Kamil Burda

Poznań, dnia: 29.04.2022
Wydanie/edition: 9
QM-001.03.10


Z UP. PREZESA ZARZĄDU
PEŁNOMOCNIK ZARZĄDU DS. ZSZ

Katarzyna Janowicz

Apator Powogaz S.A.
Jaryszki 1c, 62-023 Żerniki
tel.: 48 (61) 841 81 01
NIP 78 1-00-20-601
REGON P-630509799
www.apator.com



Apator Powogaz S.A.

Jaryszki 1c, 62-023 Żerniki

Secretariat: sekretariat.powogaz@apator.com, tel. +48 61 84 18 101

Sales Department / Customer Service: tel: +48 61 84 18 149

Customer Service Center: handel.powogaz@apator.com

Export: export.powogaz@apator.com

Technical support: support.powogaz@apator.com, tel. +48 61 8418 131, 134, 294

Complaints: reklamacje.powogaz@apator.com

www.apator.com

2022.067.I.EN.M